

Connecting Simplebus speaker to normal push buttons

Use with Art. 1250 for 1602, 4660 & 4660C

The Simplebus audio/video units have a ribbon cable which include a yellow wire and a green wire. These are the call lines for 2 call buttons. They can be programmed for either button 1 or 2.

Connections

1. Cut the Green wire as far away from the 4660 as possible
2. Connect the Green wire to one side of your call button
3. Connect the other side of the call button to the –ve terminal of the connector, connected to the ribbon cable
 - a. –ve terminal is located between S & SE terminals
4. Repeat for the Yellow wire (if required. Ie. If there are 2 buttons to be connected)

Programming

1. Set the DIP switch 1 ON and the rest OFF – for button selected to call apartment 1
 - a. For apartment 2, set DIP 2 ON and the rest off. For any other setting refer to the guide in the Comelit instructions
2. Set the apartment (phone or video phone) DIP switch 1 ON (for apartment 1)
3. Switch the programming switch to RED position (program position)
4. Press the relevant call button (this programs the 1602, 4660 or 4660C)