

DG15 Quick Start Guide

1. Change Master Code

- Enter programming mode
- Press *00
- Enter new master code (4 or 5 digits depending on settings of the jumper) (1beep)
- Press # to exit programming mode

2. Reset Master Code to default and clear all User Codes

- Insert jumper (RESET) into pins 1-2 (5 beeps Master Code Reset)
- Insert jumper (RESET) back into pins 2-3

3. Enter Programming mode

- Enter the master code twice. Default code is 1234 or 12345 depending on settings of the jumper (after 60 sec. If no date entered, it will automatically exit the setting mode.)

4. Add User

- Enter programming mode (2 beeps)
- Enter user location (number) *01 ~ *21
- Enter 4 or 5 digit user code (1 beep)
- Press # to exit programming mode or repeat step to add more users, starting from user location (number).

5. Delete User

- Enter programming mode (2 beeps)
- Enter user location (number) *01 ~ *21 to delete
- Enter 0000 (or 00000) (1 beep)
- Press # to exit programming mode repeat step to delete more users, starting from user location (number)

6. Set Door Lock Release Time

- Enter programming mode
- Enter *30 (*31 only for last user location *21)
- Enter from 01 up to 99 sec. (1 beep)
- Press # to exit programming mode

7. Set up 4 or 5 digit codes mode for the keypad

- jumper (4or5) into pins 1-2 for 4 digit mode
- jumper (4or5) into pins 2-3 for 5 digit mode
- It's recommended to clear all stored codes prior to new setting.