

# VX810N-9 CodeLock

## FEATURES

- Access control for a single door with 9 programmable codes (from 4 to 8 digits) .
- Personal access code to go into the “Programming Menu” ( from 4 to 8 digits).
- Possibility to program or cancel a single access code.
- Programming of the working time of relay from 1 up to 99 seconds or permanent.
- Possibility to activate the relay by shorting terminals ”SW” and “ - “. Relay will operate for the programmed time.
- Electronic call tone by pressing directly “Clear/Bell” button ( use Art.512/A connected on terminals “CA” and “-“).
- Keypad gives out an acoustic (buzzer) signaling during entering codes and a continuous melody for 4 or more seconds, according to the number of mistakes (self protection).


Keypad has got also 2 LEDs to show the following:

- 1) Correct relay code: green LED on for 2 seconds.
- 2) Red LED always on while entering into the “programming menu”.

- Contacts of the relay are available ( N.O and N.C) with 5A max. 24V AC or DC.
- Power requirements for VX810N-9: 12/24V AC, 2VA.

## INITIALIZATION

When the installation is concluded and carried out according to the wiring diagram, power up the system and program it by following "VX810N-9 PROGRAMMING" Flow Chart.

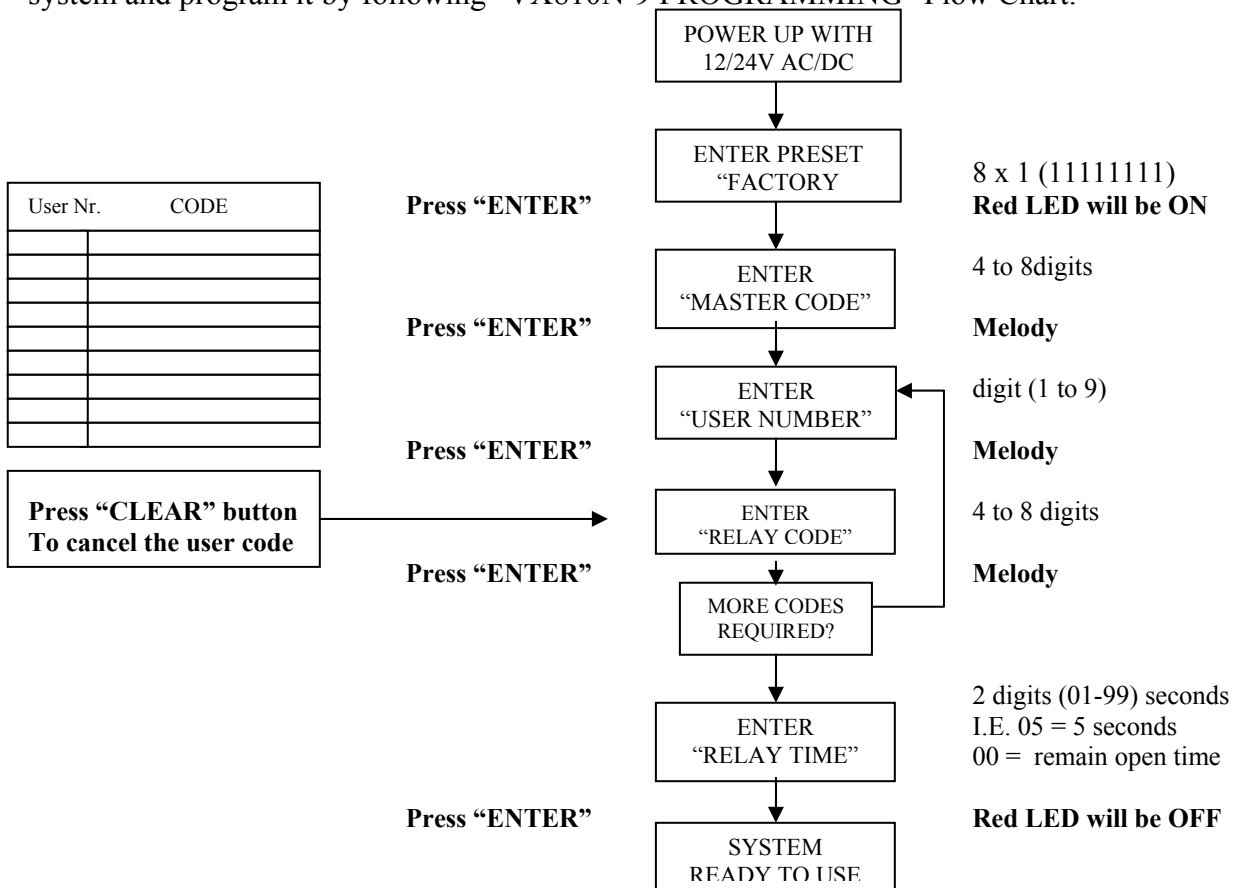

## OPERATION

To use the system, type in the programmed code and press “ENTER” button, green LED will be on for and relay will operate for the programmed time.

To cancel remain open time, type in same code and press “CLEAR” button.

If a wrong code is entered, a continuous melody will give out for 4 or more seconds, according to the number of mistakes.

To activate the Bell, press the “Clear/Bell” button: 3 intermittent call tone will give out.

---

If helps is required for installing or operating this unit, please contact our technical department on: +39 734 631669 (all countries) or 0191-224-3174 (UK)